

OPL- CRWN-019

Description: Removing and replacing handles from side lift up windows.

Removing the handle

- 1 Undo the nut retaining the catch plate and remove the nut & catch plate from the inside of the side lift up window.
- 2 Undo and remove the second nut & washer.
- 3 Using a heat gun gently apply heat around the retaining collar to soften sealant in order to remove the collar.
- 4 Once collar is removed use special pliers to remove circlip (which is retaining the handle in position).
- 5 Remove handle
- 6 Replace new handle - Check for correct rotation and locking position prior to re-assembly
- 7 Replace circlip and collar.
- 8 Replace washer and nut - note screw nut finger tight only.
- 9 Replace catch plate and nut - note screw nut and pinch tight with spanner

